### INSTALACIÓN IMPRESORA EPSON-TM T20

1. Para descargar el driver, ingrese al siguiente link <u>www.cxr.com.co/SAC/</u>

← → C ③ No es seguro | www.cxr.com.co/SAC/

# Index of /SAC

<u>Name</u>	Last modified	<u>Size</u> De	<u>scription</u>
Parent Directory		-	
Carpeta_PosPuntored.r	ar 2016-11-06 20:5	0 15M	
Carpeta_WinposPuntor	<u>r.&gt;</u> 2016-11-06 20:5	0 18M	
Driver Citizen CTS31.	<u>&gt;</u> 2017-08-04 11:4	8 7.1M	
Driver_impresora_Eps	<u>&gt;</u> 2016-11-06 20:5	0 45M	
Driver_impresora_eps.	.> 2016-11-06 20:5	0 46M	•
Driver_impresora_wpo	<u>&gt;</u> 2016-11-06 20:5	0 3.0K	
Driver_impresora_wpo	<u>&gt;</u> 2016-11-06 20:5	0 25K	
Driver_lector_de_cod	<u>&gt;</u> 2016-11-06 20:5	0 8.3M	
Driver lector de hue	<u>&gt;</u> 2016-11-06 20:5	0 70M	
Impresora_Citizen.rar	2016-11-06 20:5	0 28M	
MicajapuntoredCVRA	LT> 2016-11-06 20:5	0 26M	
POS21052014.zip	2016-11-06 20:5	0 17M	
PuntoredPagos_150720	0> 2016-11-06 20:5	0 15M	
REMESAS/	2018-02-01 18:2	0 -	
Winpos27052014.zip	2016-11-06 20:5	0 23M	
desktopXP/	2017-06-05 20:0	4 -	
microservicios/	2018-10-24 12:1	2 -	
puntorapido/	2017-03-22 23:3	1 -	

### 2. Clic en descargas y ejecutar el Driver

				-		×
		e	2 🕁	•		Ø 🗄
	Nueva pestaña				C	Ctrl + T
	Nueva ventana				C	trl + N
	Nueva ventana o	de in	cógnito	Ctrl +	May	ús + N
_	Historial					•
	Descargas				0	Ctrl + J
	Marcadores					•
	Zoom		-	90 %	+	53
	Imprimir				С	trl + P
	Enviar					
	Buscar				C	Ctrl + F
	Más herramienta	as				•
	Editar	С	ortar	Copia	r	Pegar
	Configuración					
	Ayuda					+
	Salir					

3. Ejecutar el driver (clic sobre el ejecutable APD\_417B\_T20.exe).



4. Seleccionar custom, luego next

	EPS	SON Advanced Printer Driver 4 - InstallShield Wizard
	<b>₩elcome</b> Change or de	elete APD4, or create a silent installer for APD4.
	Welcome to allows you to	the EPSON Advanced Printer Driver 4 Setup Maintenance program. This program change the current installation. Click one of the options below.
	🔘 Silent	
	<b>1</b>	Create a silent installation script file using the settings from the previous installation.
	<ul> <li>Custom</li> </ul>	Select new program features to add or select currently installed features to delete.
	O Uninstall	Delete all installed features.
1115	laioneia —	< Back Next > Cancel

5. Clic Add



6. Seleccione EPSON TM-T20 Receipt -English

EPSON Advan	ced Printer Driver 4 - InstallShield Wizard	×
Add Printer Settings for the printer being	added	4
Specify the printer to be add	led.	
Select driver:	EPSON TM-T20 Receipt - English	Ň
Printer name:	EPSON TM-T20 Receipt - Japanese EPSON TM-T20-42C Receipt - English EPSON TM-T20-42C Receipt - Japanese	
Port Type:		~
Set as Default Prin	iter	
Note: Steps for connecting 1. Add the device by conne 2. Add the other device. Set	a customer display to the printer cting it to the PC directly. ect the device to be connected in "Communication".	
InstallShield	< Back Next > Ca	ancel

## 7. Seleccione EPSON TM-T20, luego next

EPSON Advanced Printer Driver 4 - InstallShield Wi	zard ×
Printer Configuration Change the printer settings.	14
Select a printer to configure. If the desired printer is not in the list, please add the	printer.
(Installed) EPSON TM-T20 ReceiptE4	Add
	Edit
	Delete
	Сору
~	
Enable Plug & Play installation for all printer models.	
InstallShield	
< Back Next >	Cancel

### 8. Clic en Next

EPSON Advanced Printer Dr	iver 4 - I	InstallShield Wizard	ĸ
Select Features Select the features setup will install.		4	
Select the features you want to install, and dese	elect the fea	atures you do not want to install. Description Environment	
452.00 KB of space required on the C drive 369214868.00 KB of space available on the C d InstallShield	drive < Back	K Next > Cancel	

### 9. Clic en finish

EPSON Advanced Printer Driver 4 - InstallShield Wizard
Maintenance Complete InstallShield Wizard has finished performing maintenance operations on EPSON Advanced Printer Driver 4.
< Back Finish Cancel

VERIFIQUE SI QUEDO INSTALADA Y CONFIGURE LAS MARGENES

**1.** Ingrese a panel de control  $\rightarrow$  Hardware y Sonido  $\rightarrow$  Ver dispositivos e impresoras



2. Clic derecho sobre la impresora EPSON  $\rightarrow$  Propiedades de impresora  $\rightarrow$  Seleccione



**3.** Clic en preferencias  $\rightarrow$  Layout  $\rightarrow$  Dejar la margen como se muestra en la imagen.

Main Layout Watemark Document Settings Halftone Settings mpattr Puetos Opciones avanzada aper Size A4 210 x 237 mm utput Paper Some Rol Paper Adjust Print Position Vertical Direction 0.0 mm Horizontal Direction 0.0 mm Rolate Normal Rotate by 30 Degrees Rotate by 30 Degrees Rotate by 270 Degrees Rotate by 270 Degrees Reduced Size Print (Bar codes/20 symbols are not reduced) Fit to Printable Width Custom Scale 100.00 \$% Preferencias Imprimir página de prueba	rinter Settings Barcode 2D Code Font Utility	Version		Seguridad	Utility	Versio
aper Size 44 210 x 237 mm utput Paper 20mm Roll Paper Adjust Print Position Vertical Direction 0.0 mm Horizontal Direction 0.0 mm Rotate Normal Rotate by 300 Degrees Rotate by 300 Degrees Rotate by 180 Degrees Rotate by 270 Degrees Reduced Size Print (Bar codes/20 symbols are not reduced) Fit to Printable Width Custom Scale 100.00 \$\$ %	Nain Layout Watermark Document Settings Halfton	ne Settings	mpartir	Puertos	Opcion	es avanzada
Vertical Direction 0.0  mm Horizontal Direction 0.0  mm Rotate Normal Rotate Rotate by 30 Degrees Rotate by 30 Degrees Rotate by 270 Degrees Reduced Size Print (Bar codes/2D symbols are not reduced) Fit to Printable Width Custom Scale 100.00  X Preferencias Imprimir página de prueba	aper Size 44 210 x 297 mm  vtput Paper  58mm Roll Paper  v Addust Prior Position		M-T20 Re	ceiptE4		
Rotate  Normal  Rotate by 90 Degrees  Rotate by 270 Degrees  Rotate by 270 Degrees  Reduced Size Print (Bar codes/2D symbols are not reduced)  Reduced Size Print (Bar codes/2D symbols are not reduced)  Custom  Cust	Vertical Direction 0.0 🚔 mm Horizontal Direction 0.0 🌩 mm	1				
<ul> <li>Normal</li> <li>Rotate by 90 Degrees</li> <li>Rotate by 180 Degrees</li> <li>Rotate by 270 Degrees</li> <li>Reduced Size Print (Bar codes/2D symbols are not reduced)</li> <li>Fit to Printable Wridth</li> <li>Custom</li> <li>Scale</li> <li>100.00</li> <li>10</li></ul>	Rotate					
<ul> <li>O Rotate by 90 Degrees</li> <li>O Rotate by 180 Degrees</li> <li>O Rotate by 270 Degrees</li> <l< td=""><td>Normal     Abc</td><td></td><td></td><td></td><td></td><td></td></l<></ul>	Normal     Abc					
○ Rotate by 180 Degrees ○ Rotate by 270 Degrees ○ Rotate by 270 Degrees ○ Rotate by 270 Degrees ○ Reduced Size Print (Bar codes/2D symbols are not reduced) ● Fit to Printable Width ○ Custom Scale 100.00 ♀ ≈ Papel disponible: A4 210 x 297 mm UT 8.5 x 11 in Postcard 100 x 148 mm Roll Paper 58 x 297 mm 3 ppp Preferencias Imprimir página de prueba	Rotate by 90 Degrees		M- f20 Ree	ceiptE4		
<ul> <li>O Rotate by 270 Degrees</li> <li>A 210 x 297 mm LT 8.5 x 11 in Postcard 100 x 148 mm Roll Paper 80 x 297 mm 3 ppp</li> <li>Preferencias</li> <li>Imprimir página de prueba</li> </ul>	Rotate by 180 Degrees			Papel	disponible:	
Custom Scale 100.00 🗘 %	Rotate by 270 Degrees     Reduced Size Print (Bar codes/2D symbols are not reduced)     Fit to Printable Width		lo	A4 21 LT 8. Posto Roll F	0 x 297 mm 5 x 11 in ard 100 x 148 m Paper 58 x 297 m Paper 80 x 297 m	
Preferencias Imprimir página de prueba	Custom Scale 100.00 🔹 %		J3 ppp	Konr	aper 00 x 237 11	~
			Pref	ierencias In	nprimir página o	le prueba

**4.** Verifique que la impresora se encuentre en puerto USB000, Como se muestra en la imagen.

Administrac	ión del color	Seg	guridad	Utility	Version
General	Compa	rtir	Puertos	Opcion	es avanzadas
EP	SON TM-T20 R	eceiptE4			
nprimir en le imer puerto	os siguientes pu o libre seleccion	iertos. Los ado.	documentos	se imprimirán e	n el
Puerto	Descripción		Impresora		^
FILE:	Imprimir a un	archivo			
Nitro P	Local Port				
PORTP	Puerto local				
nul:	Puerto local				
C:\Pro	Puerto local		print2		_
USSB001	Puerto local				
_ ESDPR	028 IM-120				×
Agregar p	ouerto	Elimina	r puerto	Configurar	puerto
Habilitar c	ompatibilidad k	oidirection	al		
Habilitar a	grupación de in	nnresoras			
j i labilitar a	grapación acim	npresoras			

**TENER EN CUENTA:** Si usted cuenta con seguridad microservicios, recuerde que la impresora cambia de nombre a wposs.

Para cambiar el nombre de la impresora, clic derecho sobre la impresora. Opción propiedades de la impresora, en el campo nombre asignar "wposs"

